

# Assembly Instruction Sheet #IS-1061P22-6

## For Style 1061P22-6

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Light Source:** (6) G9 3-12W LED(Not include).


**Estimated Assembly Time:** 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

### ⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

### Package Contents

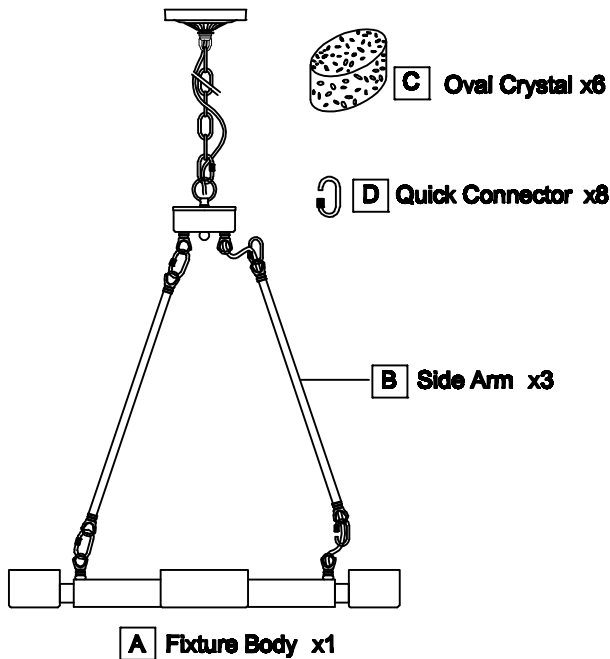

### STEP 1 -Install Side Arms to Fixture Body

- Pass supply wires with ground wire through one Quick Connector (E) and the Middle Canopy.
- Attach one end of the Side Arm (B) to the loop on the Fixture Body (A) with one Quick Connector (E) and attach another end of the Side Arm (B) to the loop on the bottom of the Middle Canopy with another Quick Connector (E).

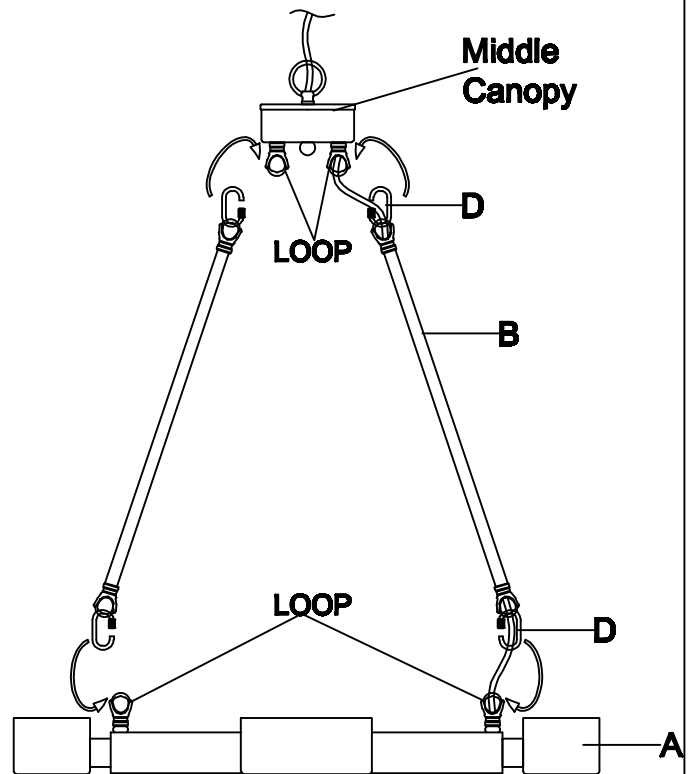


Figure 1

### Hardware Contents

PART	DESCRIPTION	QUANTITY
AA	Canopy Lock Ring	1pcs
BB	Wire nut	3pcs
CC	Canopy Chain Loop	1pcs
DD	Crossbar	1pcs
EE	Outlet Box Screw	2pcs

